


CARNES COMPANY, 448 S. Main St., P. O. Box 930040, Verona, WI. 53593-0040 Phone: 608/845-6411 Fax: 608/845-6470 E-Mail: carnes@carnes.com www.carnes.com

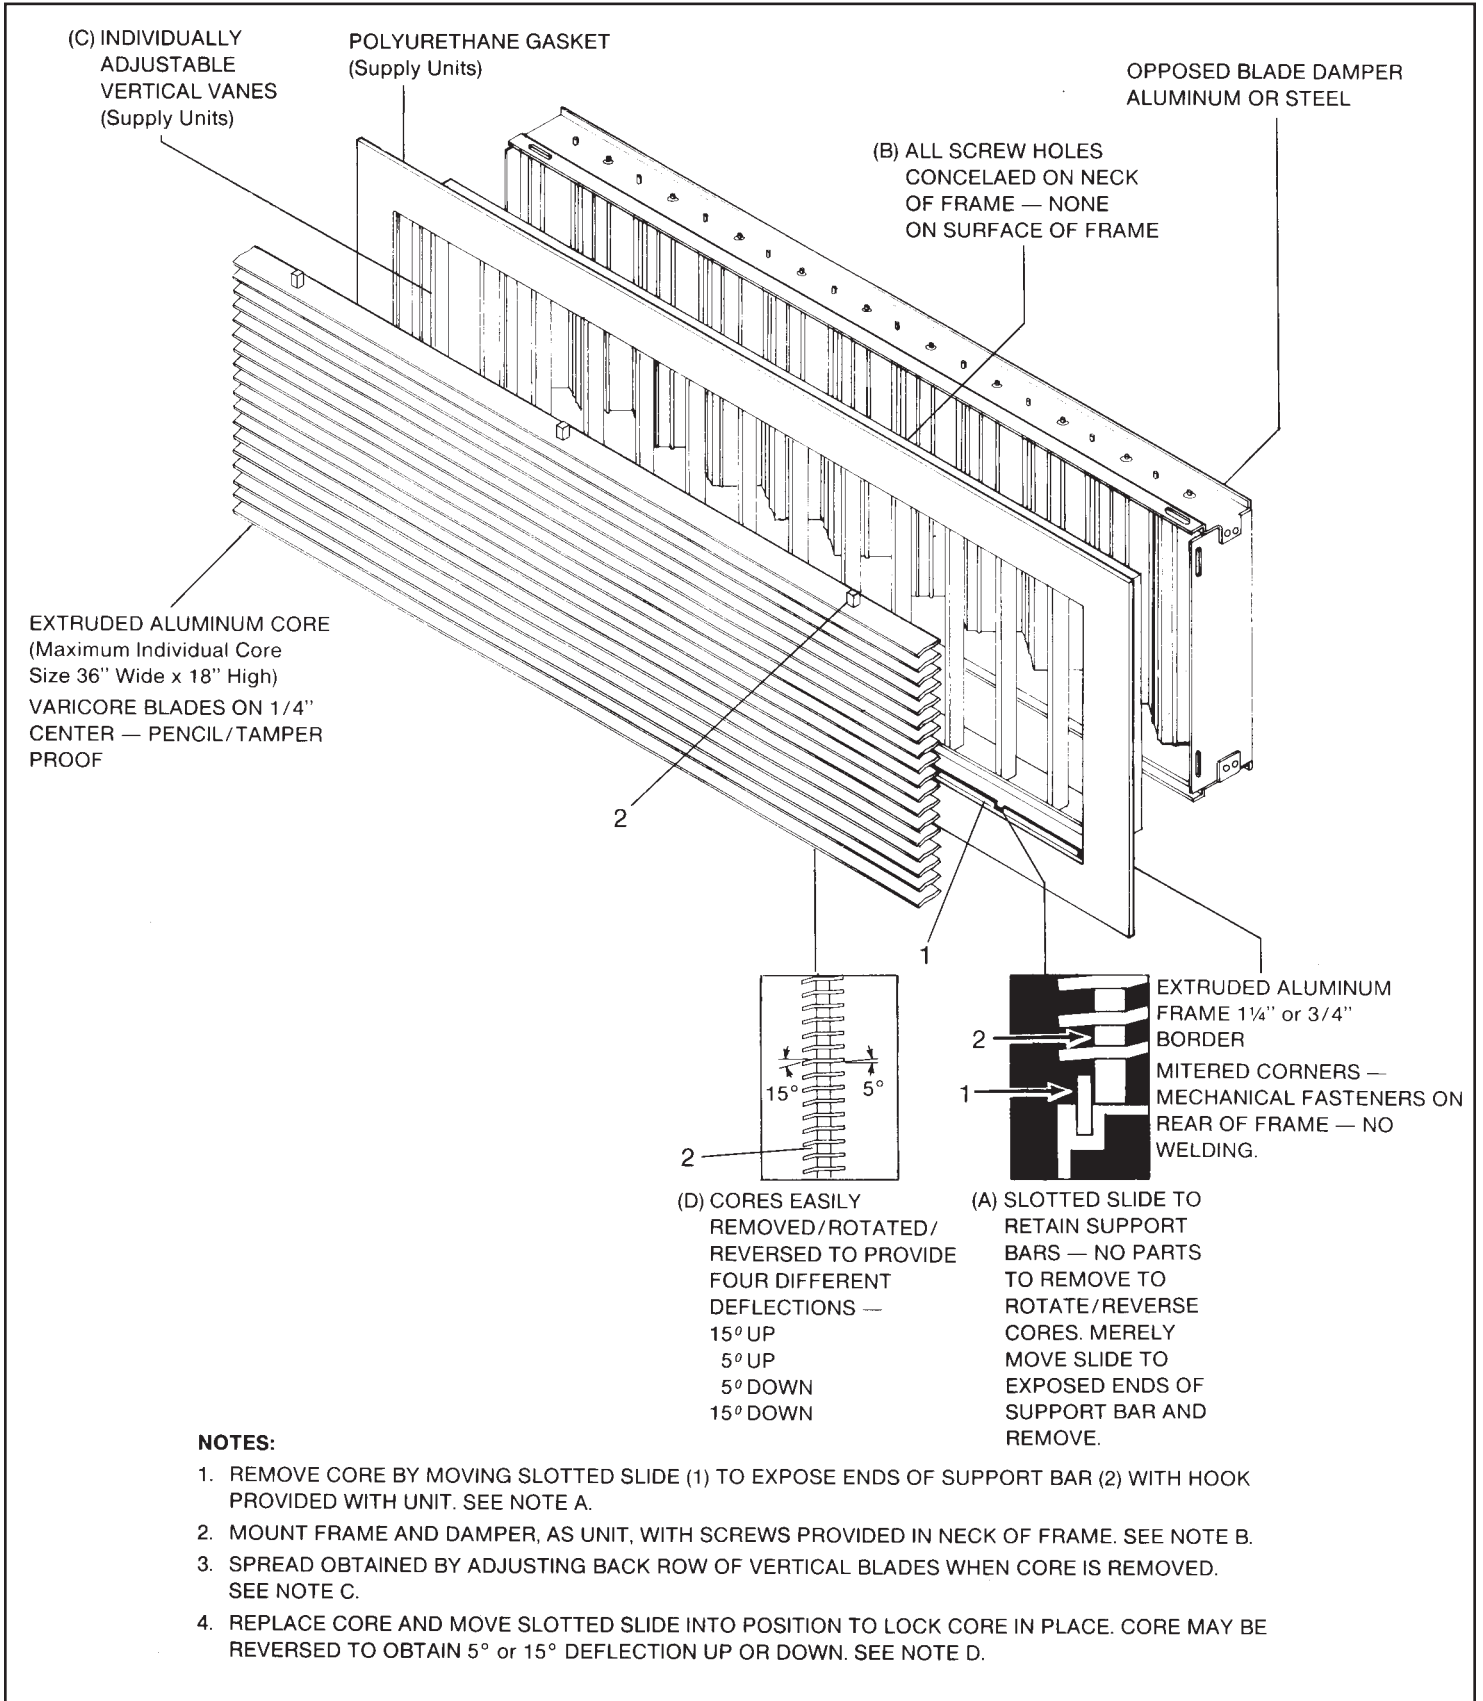

NOTES:

1. REMOVE CORE BY MOVING SLOTTED SLIDE (1) TO EXPOSE ENDS OF SUPPORT BAR (2) WITH HOOK PROVIDED WITH UNIT. SEE NOTE A.
2. MOUNT FRAME AND DAMPER, AS UNIT, WITH SCREWS PROVIDED IN NECK OF FRAME. SEE NOTE B.
3. SPREAD OBTAINED BY ADJUSTING BACK ROW OF VERTICAL BLADES WHEN CORE IS REMOVED. SEE NOTE C.
4. REPLACE CORE AND MOVE SLOTTED SLIDE INTO POSITION TO LOCK CORE IN PLACE. CORE MAY BE REVERSED TO OBTAIN 5° or 15° DEFLECTION UP OR DOWN. SEE NOTE D.